

CENTRAL SUPPORT SYSTEMS

MAS 5305 Central Support System


(for SUPERPLAN, SUPERPLAN PLUS, SUPERPLAN XXL, DUSCHPLAN, DUSCHPLAN XXL, CAYONOPLAN, ARRONDO, CORNEZZA, ZIRKON (0.14 and 0.26 inch), XETIS

Order No.

\$

Recommended for shower tray foot frame FR 5300 FLEX or ESR floor-level
whose side length is 35.43 inch and longer
9.45 x 11.81 inch (W x L)
Height: 1.89 to 5.31 inch (adjustable)

Set comprising:
2 x double-sided adhesive tape
1 x upper wedge
1 x lower wedge
1 x pull plate (ready-mounted)
1 x pull cord (ready-mounted)
1 x adapter panel 1.57 inch
1 x adapter panel 0.79 inch

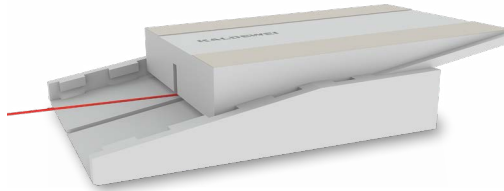

688076530000


MAS 5315 Central Support System for CONOFLAT

Order No.

\$

Recommended for shower tray foot frame FR 5300 FLEX or ESR floor-level (FR 5300/ESR floor-level)
whose side length is 35.43 inch and longer
Height: 1.97 to 5.39 inch (adjustable)

Set comprising:
2 x upper wedge for shower trays from 59.06 x 31.50 inch
incl. double-sided adhesive tape (ready-mounted)
2 x upper wedge for shower trays from 55.12 x 39.37 inch
incl. double-sided adhesive tape (ready-mounted)
2 x lower wedge
2 x pull plate (ready-mounted)
2 x 62.99 inch pull cord
(ready-mounted)
2 x adapter panel 0.39 inch
2 x adapter panel 0.79 inch
2 x adapter panel 1.57 inch

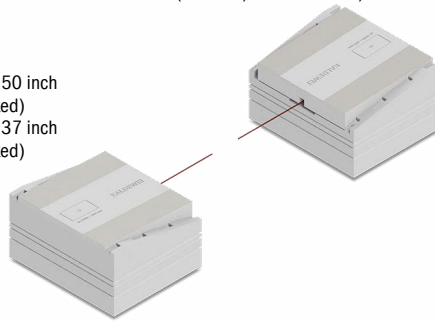

688076990000

Please note: Shower trays from size 35.43 x 35.43 which are installed using a frame system require central support. We recommend using MAS.